



DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.
HOUSING	18411-01	SPACER	18412-19
LEVER	18411-02	REAR END PLATE	18412-20
PIN	P0322	SCREW (2)	18412-21
BUSHING	18413-03	VALVE SPRING WASHER	18411-22
HOOK	18413-04	RETAINER RING (2)	18411-23
WASHER	18413-05	SPRING	18411-24
SCREW	18413-06	ORING	P0802
SET SCREW	18413-07	VALVE SPRING WASHER	18411-26
HOUSING OIL SEAL	18413-09	VALVE HOUSING	18411-27
VALVE SPRING	18413-10	VALVE STEM SLEEVE	18411-28
BLADE CHUCK	18413-11	ORING	R0515
SCREW (4)	18413-12	VALVE STEM	18411-30
FRONT PLATE	18412-13	VALVE SPRING	18411-31
FRONT PLATE PARKING	18412-14	REAR COVER	18411-32
REAR BUMPED	18412-15	NOISE MUFFLE (2)	18411-33
PISTON STEM	18412-16	MUFFER	18411-34
CYLINDER	18412-17	REAR CAP	18411-35
VALVE SLEEVE	18412-18	RETAINER RING	18411-36