


MPT-11530 Air Pistol Shear

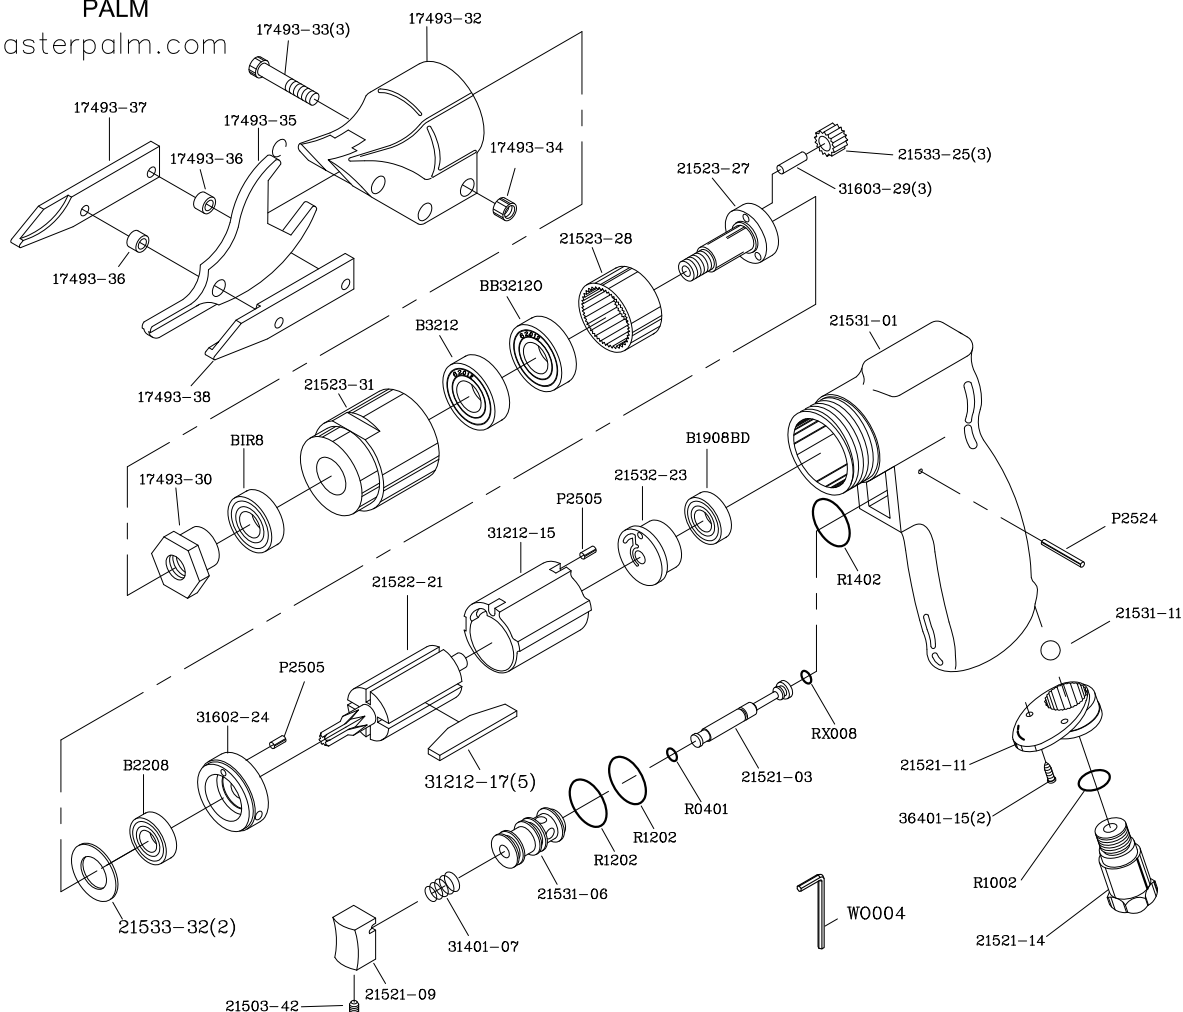

DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.
MOTOR HOUSING	21531-01	ROTOR BLADE (5)	31212-17
O-RING	RX008	FRONT END PLATE	31602-24
THROTTLE VALVE	21521-03	SPINDLE	21523-27
O-RING	R0401	PLANET PIN (3)	31603-29
O-RING (2)	R1202	PLANET GEAR (3)	21533-25
VALVE BUSHING	21531-06	INTERNAL GEAR	21523-28
SPRING	31401-07	BALL BEARING	BB32120
TRIGGER	21521-09	BALL BEARING	B3212
SET SCREW	21503-42	CLAMP NUT	21523-31
BUSHING PIN	P2524	BALL BEARING	BIR8
EXHAUST DIFFUSER	21521-11	LOCK SCREW	17493-30
SCREW (2)	36401-15	LOCK NUT	17493-32
O-RING	R1002	SCREW (3)	17493-33
INLET BUSHING	21521-14	SCREW CAP	17493-34
BALL BEARING	B2208	BLADE PIECE	17493-35
REAR END PLATE	21532-23	WASHER (2)	17493-36
SPRING PIN (2)	P2505	RIGHT BLADE	17493-37
CYLINDER	31212-15	LEFT BLADE	17493-38
ROTOR	21522-21	4mm HEX. WRENCH	WO004
BALL BEARING	B1908BD	6.3mm STEEL BALL	21531-11
MOTOR WASHER(2)	21533-32	O RING	R1402