


MPT-18070 5" Extension-3" Conner Cutter

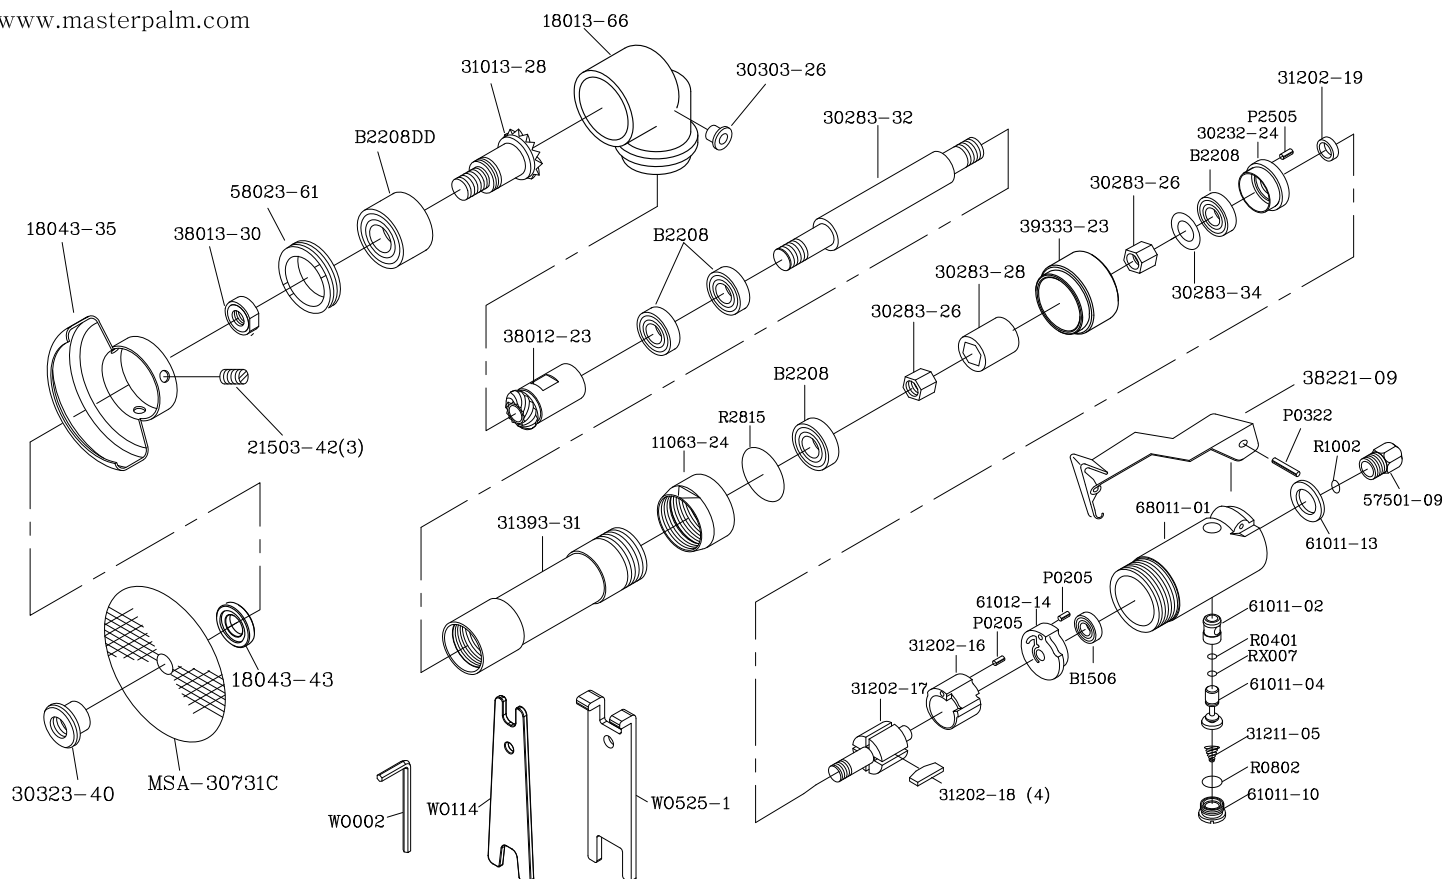

DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.
MOTOR HOUSING	68011-01	WASHER	30283-34
VALVE BUSHING	61011-02	O RING	R2815
O RING	R0401	COUPLING NUT (2)	30283-26
THROTTLE VALVE	61011-04	WASHER	39333-23
O RING	RX007	COUPLING	30283-28
SPRING	31211-05	MOTOR CLAMP	11063-24
O RING	R0802	EXTENSION HOUSING	31393-31
VLAVE SCREW	61011-10	EXTENSION SPINDLE	30283-32
THROTTLE LEVER	38221-09	SPINDLE GEAR	38012-23
LEVER PIN	P0322	ANGLE HEAD HOUSING	18013-66
EXHAUST SLEEVE	61011-13	OIL PLUG	30303-26
INLET BUSHING	57501-09	BEARING	B2208DD
BEARING	B1506	PINION GEAR	31013-28
DOWEL PIN (2)	P0205	CLAMP NUT	58023-61
REAR END PLATE	61012-14	SPINDLE NUT	38013-30
DOWEL PIN	P2505	COVER SCREW (3)	21503-42(3)
CYLINDER	31202-16	WHEEL COVER	18043-35
ROTOR	31202-17	3"CUT-OFF WHEEL	MSA-30731C
ROTOR BLADE (4)	31202-18 (4)	WHEEL NUT	30323-40
ROLL COLLAR	31202-19	WHEEL SPANNER WRENCH	WO525-1
FRONT END PLATE	30232-24	14-19mm SPANNER WRENCH	WO114
BEARING (4)	B2208	2mm HEX. WRENCH	WO002
WHEEL WASHER	18043-43	O RING	R1002