


MPT-38670 Removal Tool

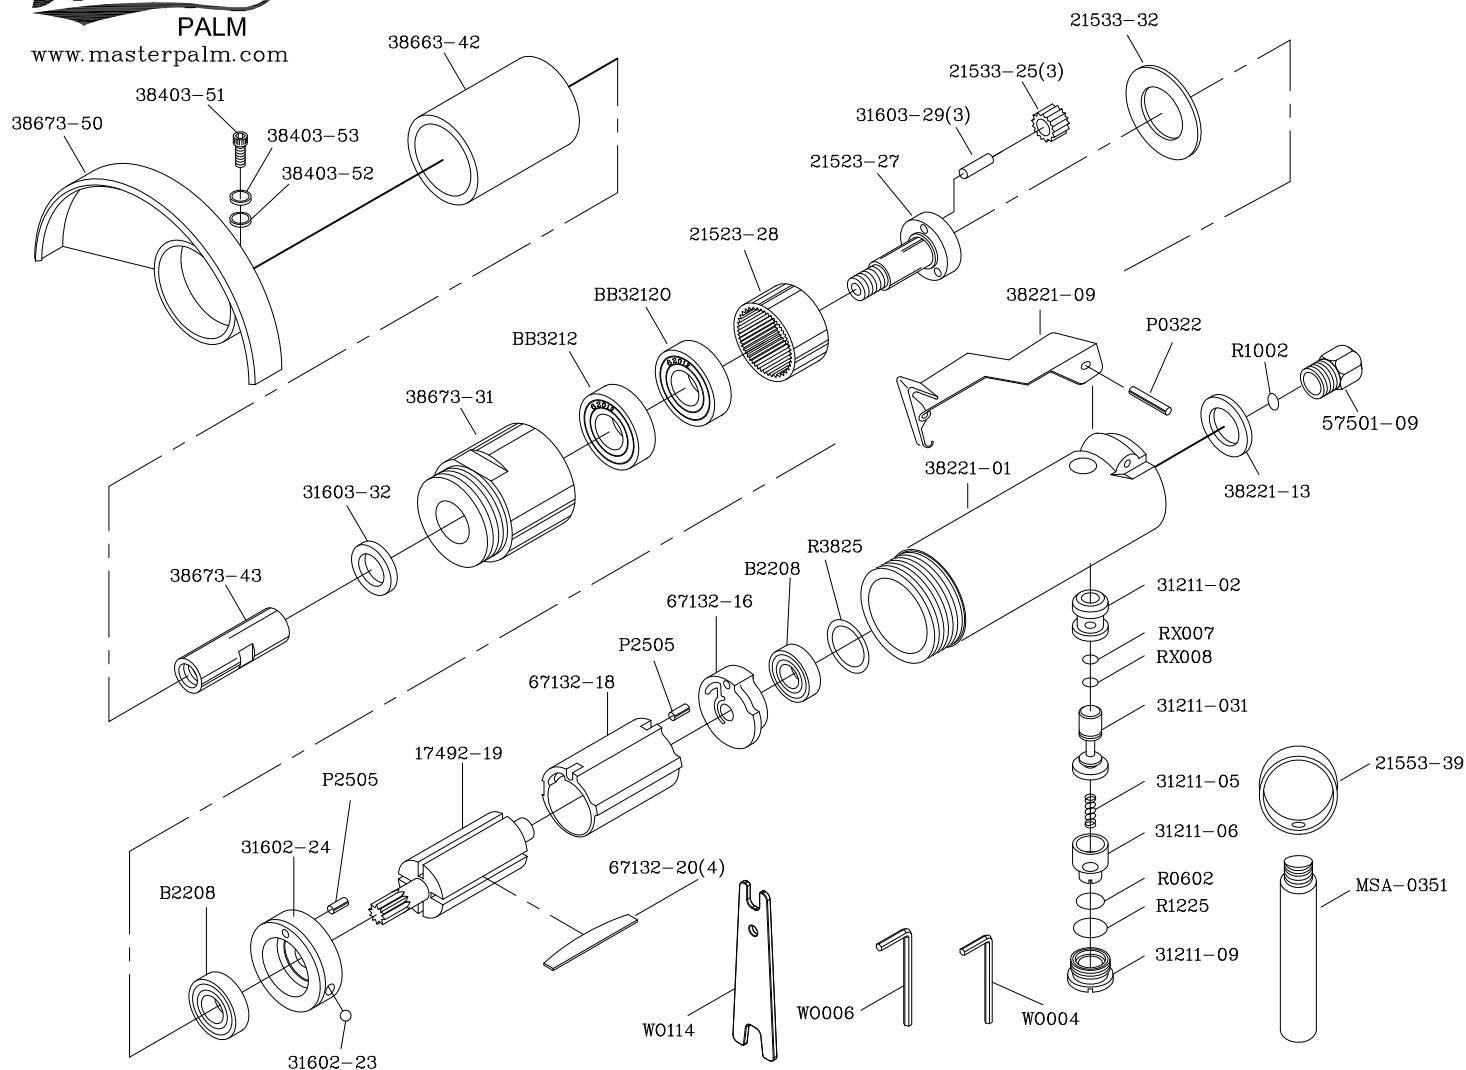

DESCRIPTION	PARTS NO.	DESCRIPTION	PARTS NO.
MOTOR HOUSING	38221-01	ROLL PIN	31602-23
VALVE BUSHING	31211-02	MOTOR WASHER	21533-32
O RING	RX007	BEARING	BB32120
O RING	RX008	BEARING	BB3212
THROTTLE VALVE	31211-031	INTERNAL GEAR	21523-28
SPRING	31211-05	PLANET CAGE	21523-27
AIR REGULATOR	31211-06	PLANET PIN (3)	31603-29
O RING	R0602	PLANET GEAR (3)	21533-25
O RING	R1225	CLAMP NUT	38673-31
VALVE SCREW	31211-09	SPINDLE WASHER	31603-32
THROTTLE LEVER	38221-09	SPINDLE	38673-43
LEVER PIN	P0322	CONNECT HOUSING	38663-42
EXHAUST LEVER	38221-13	CLAMP	21553-39
INLET BUSHING	57501-09	CLAMP SHAFT	MSA-0351
BEARING (2)	B2208	4" COVER	38673-50
REAR END PLATE	67132-16	COVER SET SCREW	38403-51
MOTOR PIN(2)	P2505	COVER SER SCREW WASHER	38403-52
CYLINDER	67132-18	14mm SPNNER WRENCH	W0114
ROTOR	17492-19	4mm HEX WRENCH	W0004
ROTOR BLADE(4)	67132-20	6mm HEX WRENCH	W0006
FRONT END PLATE	31602-24	O RING	R3825
SPRING WASHER	38403-53	O RING	R1002